PYLE®
view

Operating
Instructions

PLHR96

9" TFT LCD Headrest Monitor w/ Stand

HTTP://WWW.PYLEAUDIO.COM

Appearance and function

1 .Down

2.UP

3.Remote control and IR window

4.Menu

5.Power on/off

Function

Screen size: 9 inches
Display format: 16:9
Resolution:1440×234Dots
System: NTSC/PAL
Wireless Remote Control
Dual Video Input
Reverse Imaging Left/Right Up/Down
Brightness/Contrast/Color/Tint Adjustments
Headrest Shroud and Universal Stand Mount
On Screen Display
Brightness, Contrast, Color
Power supply: DC 12V

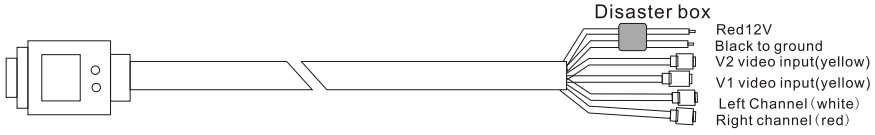

OPERATIONS OF REMOTE CONTROL

Basic operation

1.Connect the attached cable to the power source and signal cable. One tip of the cable is connected to the female socket of the monitor, another tip is to the video out line of VCD or DVD.The black cable is connected to ground,red cable is to positive pole.Please mind to connect the black and red cable correctly,or the safety fuse in the disaster box will melt protectively.Connect the left (white)and right(red) channel line with the respective channel audio output of VCD and DVD.

2.When power on,the monitor shows VCDor DVD signal.If no signal,the blue screen appears.

3.Brightness,contrast,color,tint can be adjusted from the function menu. Just press the “Analog decrease” and “Analong increase” ,adjust to the best quality of the images.

4.There is audio signal output when the monitor is on V1.There is not audio signal output when the monitor is onV2.